




curbsill

Installation Instructions

1. Cut the Curbsill cultured marble threshold to the required length with a hacksaw, masonry blade (circular saw) or wet saw.
2. Clean all surfaces before adhering the threshold to the shower curb.
3. Adhere using polymer modified thinset or acrylic tile mastic (see your tile specialist).
4. Build up outside edge of curb with thinset to create an approximate 1/4" slope towards inside of shower (see diagram below).
5. For water tight seal, caulk at walls and under threshold with silicone caulking

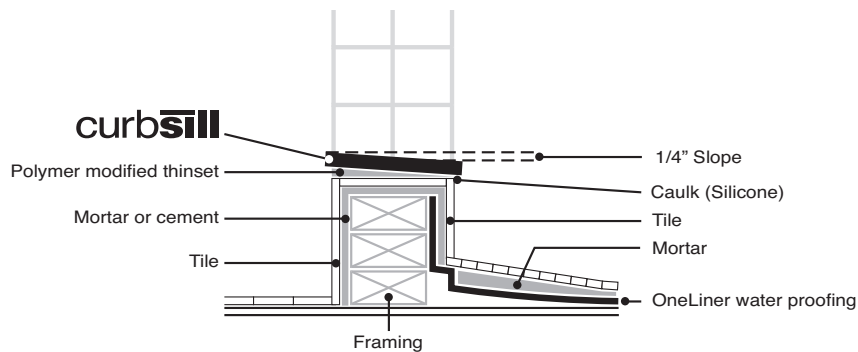

For more information about CurbSill and other ceramic tile shower products, visit www.dixsystems.com


Dix Systems Inc. / Edmonton / Alberta / Canada



curbsill

Installation Instructions

1. Cut the Curbsill cultured marble threshold to the required length with a hacksaw, masonry blade (circular saw) or wet saw.
2. Clean all surfaces before adhering the threshold to the shower curb.
3. Adhere using polymer modified thinset or acrylic tile mastic (see your tile specialist).
4. Build up outside edge of curb with thinset to create an approximate 1/4" slope towards inside of shower (see diagram below).
5. For water tight seal, caulk at walls and under threshold with silicone caulking

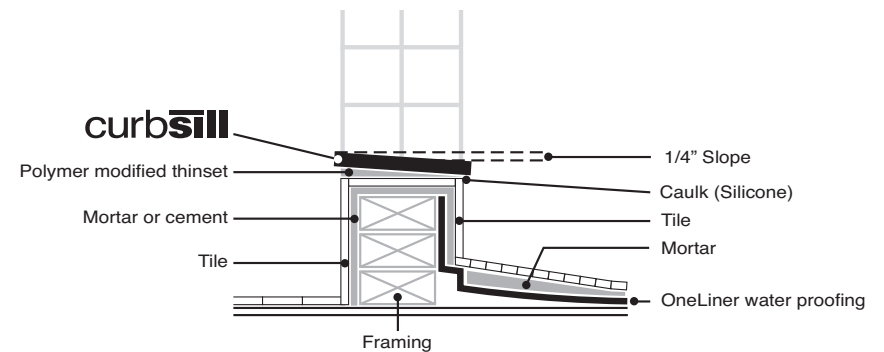

For more information about CurbSill and other ceramic tile shower products, visit www.dixsystems.com

Dix Systems Inc. / Edmonton / Alberta / Canada

